




## 610-612 Hair Dryer with 3-speed settings

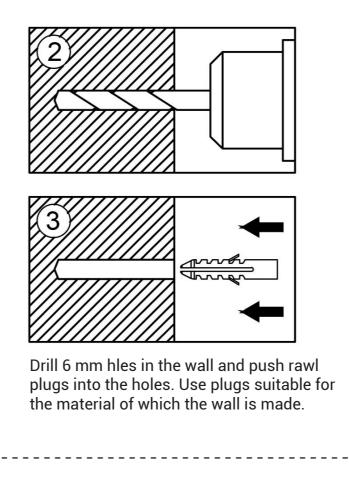

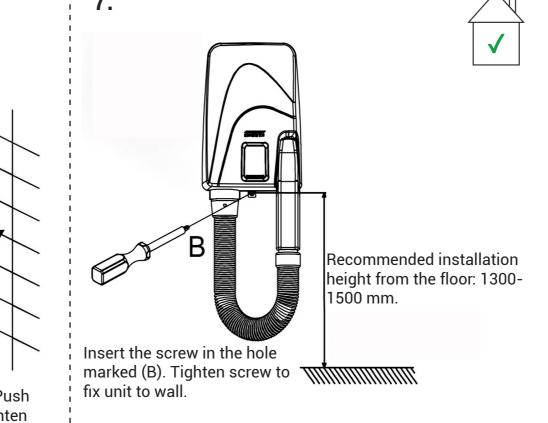

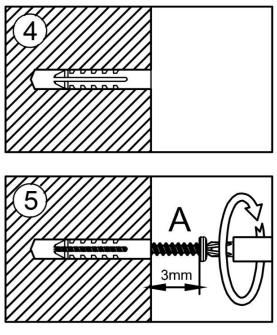



Make sure that the end of the wall plug is flush with the surface. Tighten the screw in the hole marked (A), leaving 3 mm space between wall and schrew head.



Important information regarding disposal of your electrical equipment

Products labeled with the crossed-out wheeled bin symbol represent electrical and electronic equipment and fall within the scope of the WEE directive.

The product should not be disposed of with normal household waste and is subject to separate collection.

 Contact local authorities for recycling advice.

• The product can be returned to the manufactuer / dealer who will arrange for the correct disposal.