



SPARE PARTS LIST

Hand Dryer AA 100



Pos. No.	Art. No.	Spare part
1	40025	Base plate
2	40065	Gasket
4	40096	Electricity plinth
5	40079	Plastic screw, 3 x 16 mm, Torx
6	40076	Nut for capacitor
7	40054	Capacitor 230 V, 50 Hz
8	40053	Timer 110-230 V, 50/60 Hz
9	40070	Tooth lock washer A4
10	40067	Screw, 4 x 12, Torx
11	40128	Relay 230 V, 50 Hz
12	40067	Screw 4 x 12, Torx
14	40075	Nut M4
15	40002	Fan scroll – suction side
16	40068	Screw 4 x 12, Taptite, Torx
17	40070	Tooth lock washer A4
18	40055	Motor 230 V, 50/60 Hz
19	40003	Fan scroll – motor side
20	40070	Tooth lock washer A4
21	40066	Screw 4 x 8 Torx
22	40098	Wiring attachment
23	40069	Screw 4 x 16, Taptite, Torx
24	40193	Heating element in holder, 230 V, 2250 W
25	40008	Slotted pin 3 x 16 mm
26	40107	Pushbutton
27	40064	Spring
28	40033	Screw cap for pushbutton
29	40032	Push button adapter
30	40072	Retaining ring
32+33	40063	Magnet with attachment
	40207	Pushbutton complete (magnet, spring, retaining ring)
	41205	Housing – white - complete
35	40006	Exhaust grille
36	40085	Name plate



37	40073	Allen screw
38	40074	Allen wrench
39	40026	Tensile relief clamp
40	40078	Plastic screw 3,5 x 16, Torx
43	40083	Tooth lock washer, 6,4 mm
44	40027	Brass pin for earth wire for base plate
45	40028	Stainless reinforcement for base plate
46	40077	Screw, 4 x 10, Taptite, Torx